

THE LOCKDOWN DEVICE

Installation Instructions



Step 1

After assembling all components and cleaning the manhole ring with a wire brush, lower ledger bar into manhole.



Step 5

When no threads are showing above stainless steel nut, tighten to compress gasket and seal pan gasket to manhole ring.



Step 2

Set stainless steel pan onto manhole ring.




Step 6

Fit your padlock into Lock Guard. (We recommend the Abloy PL 330/25 Lock).



Step 3

Raise ledger bar into position by pulling up on T-handle.

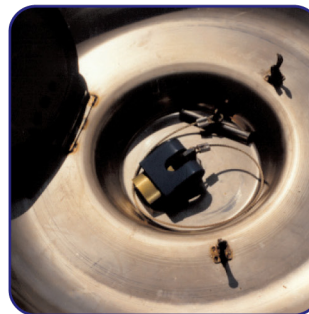

Step 7

Insert padlock shackle through the stainless steel rod and lock.



Step 4

Hand tighten stainless steel nut on threaded rod and check clearance.



Step 8

Clamp the hinged cover plate over the assembly to protect the padlock from water, dirt, and contaminants.